



OPERATOR'S MANUAL

WIL-RICH 2800 FIELD CULTIVATOR

Printed in USA (74152) J/M100 1/02

WIL-RICH
PO Box 1030
Wahpeton, ND 58074
PH (701) 642-2621
Fax (701) 642-3372

WARRANTY

The only warranty Wil-Rich gives and the only warranty the dealer is authorized to give is as follows:

We warrant products sold by us to be in accordance with our published specifications or those specifications agreed to by us in writing at time of sale. Our obligation and liability under this warranty is expressly limited to repairing, or replacing, at our option, within 12 months after date of retail delivery, any product not meeting the specifications. ***We make no other warranty, express or implied and make no warranty of merchantability or of fitness for any particular purpose.*** Our obligation under the warranty shall not include any transportation charges or costs or installation or any liability for direct, indirect or consequential damage or delay. If requested by us, products or parts for which a warranty claim is made are to be returned transportation prepaid to our factory. Any improper use, operation beyond rated capacity, substitution of parts not approved by us, or any alteration or repair by others in such manner as in our judgment affects the product materially and adversely shall void this warranty. ***No employee or representative is authorized to change this warranty in any way or grant any other warranty.***

Wil-Rich reserves the right to make improvement changes on any of our products without notice.

When warranty limited or not applicable: Warranty on hoses, cylinders, hubs, spindles, engines, valves, pumps or other trade accessories are limited to the warranties made by the respective manufactures of these components. Rubber tires and tubes are warranted directly by the respective tire manufacturer only, and not by Wil-Rich.

Warranty does not apply to any machine or part which has been repaired or altered in any way so as in the our judgment to affect its reliability, or which has been subject to misuse, negligence or accident.

A Warranty Validation and Delivery Report Form must be filled out and received by Wil-Rich to initiate the warranty coverage.

WARRANTY CLAIMS PROCEDURE

1. The warranty form must be returned to Wil-Rich within fifteen (15) working days from the repair date.
2. Parts returned to Wil-Rich without authorization will be refused. The parts must be retained at the dealership for ninety (90) days after the claim has been filed. If the Service Department would like to inspect the parts, a packing slip will be mailed to the dealer. The packing slip must be returned with the parts. The parts must be returned prepaid within thirty (30) days of receiving authorization. After the parts are inspected and warranty is verified, credit for the return freight will be issued to the dealer.
3. Parts that will be scrapped at the dealership will be inspected by a Wil-Rich Sales Representative, District Sales Manager or Service Representative within the ninety (90) day retaining period.


TO THE OWNER

The Wil-Rich 2800 Field Cultivator has a standard equipment a clearance lighting package. If your Cultivator is not equipped with this package, it can be ordered by contacting your local dealer or the factory directly.

It is the responsibility of the user to read the Operator's Manual and comply with the safe and correct operating procedures as pertains to the operation, lubrication and maintenance of the product according to the information outlined in the Operator's Manual.

If this machine is used by an employee or is loaned or rented, make certain that the operator(s), prior to operating, is instructed in safe and proper use and reviews and understands the Operator's Manual.

The user is responsible for inspecting his/her machine and for having parts repaired or replaced when continued use of this product would cause damage or excessive wear to the other parts. The word NOTE is used to convey information that is out of context with the manual text; special information such as specifications, techniques, reference information of supplementary nature.

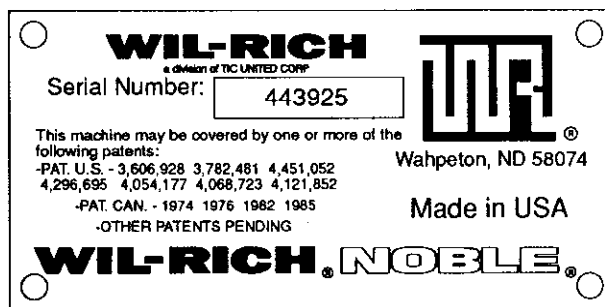

When in need of parts, always specify the model and serial number. Write this number in the space provided. The serial number plate is located on the main frame in the front right corner of 3-PT. models.

CONTENTS

Safety	2-3
Preparation	4-6
Wing Lift Circuitry	7-8
Main Frame Depth Adjustment.....	9
Wing Depth Adjustment	9-10
Cultivator Depth Circuitry	10
Leveling Cultivator	11-12
Shank and Shovel Adjustment	13
Maintenance	14
Optional Equipment.....	15-16
Trouble Shooting	17

MODIFICATIONS

It is the policy of Wil-Rich to improve its products whenever possible and practical to do so. We reserve the right to make changes, improvements and modifications at any time without incurring obligation to make such changes, improvements on any equipment sold previously.

PERSONAL SAFETY IS IMPORTANT !!

**ALL PERSONNEL INVOLVED WITH THE ASSEMBLY
AND/OR OPERATION OF THIS EQUIPMENT MUST BE
INFORMED OF PROPER SAFETY PROCEDURES.**

**OPERATOR'S AND ASSEMBLY MANUALS PROVIDE
THE NECESSARY INFORMATION.**

**IF A MANUAL IS LOST FOR A PARTICULAR IMPLEMENT,
A REPLACEMENT SHOULD BE ORDERED AT ONCE.**

**OPERATOR'S AND ASSEMBLY MANUALS ARE AVAILABLE
AT NO CHARGE UPON REQUEST.**

ADDRESS INQUIRIES TO:

HUTCHINSON WIL-RICH MANUFACTURING COMPANY

P.O. BOX 1030

WAHPETON, ND 58074

(701) 642-2621

SAFETY

Safety decals appear at various locations on your machine. The decals are provided for your safety and should be kept clean. Replace any decal that becomes worn, damaged, painted over, or otherwise difficult to read. Replacement decals are available through your Wil-Rich dealer.


BEFORE OPERATING

Use extreme care when making adjustments.

When working under or around the machine always lower shanks to the ground.

After servicing, be sure all tools, parts, or servicing equipment is removed from the machine.

Make sure that there is no one near the machine just before operating and during operation.

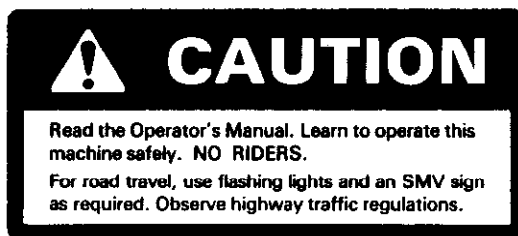

DURING OPERATION

Reduce speed when cornering on field ends and when operating on or across dead furrows.

Do not attempt to remove any obstruction while the machine is in motion.

Use extreme care when operating close to ditches, fences, or on hillsides.

No one other than the operator should ride on the tractor.

Before and during operation be sure no one is on or around the implement. Serious injury can result from improper use.

Hydraulic fluid escaping under pressure can have enough force to penetrate the skin. Hydraulic fluid may also infect a minor cut or opening in the skin. If injured by escaping fluid, see a doctor at once. Serious infection or reaction can result if medical treatment is not given immediately. Make sure all connections are tight and that hoses and line are in good condition before applying pressure to the system. Relieve pressure before disconnecting the lines or performing other work on the hydraulic system. To find a leak under pressure use a small piece of cardboard or wood: Never use hands.

ON-HIGHWAY OPERATION


Always place the machine in the transport position.

Comply with your state and local laws governing highway safety when moving machinery on a highway.

Reduce road speed on corners.

Drive at a reasonable speed to maintain complete control of the machine at all times.

A S.M.V. emblem should be used at all times while traveling on public roads.

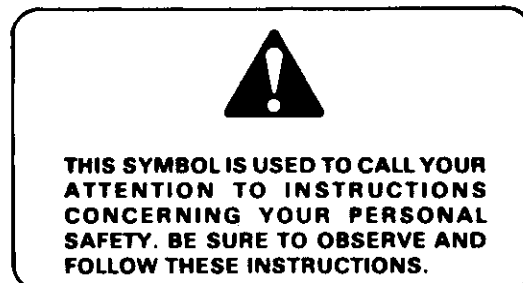

PREPARATION

Wil-Rich 2800 Field Cultivators come in drawn sizes from 10ft. to 43ft.

CULTIVATOR PREPARATION

Before using the Wil-Rich cultivator, careful inspection should become routine. A check should be made to insure that all hardware is securely tightened and moving parts properly lubricated.

Tighten all loose nuts and bolts and replace any bent or broken parts.

When tightening bolts, they should be torqued to the proper number of foot-pounds as indicated in the table unless specified (See Fig. 1). It is important that all bolts be kept tight. On new machines, all nuts and bolts should be rechecked after a few hours of operation.

TORQUE IN FOOT POUNDS

BOLT DIA	3/8	1/2	5/8	3/4	7/8	1
HEX HEAD	9/16	3/4	15/16	1-1/8	1-5/16	1-1/2
UNC	2	18	45	89	160	252
G 5	30	68	140	240	380	544
R 8	40	100	196	340	528	782
A						
UNF	D 2	21	51	102	178	272
E 5	32	70	168	264	392	572
8	48	112	216	368	792	840

PI - 75623

Fig. 1 Bolt Torquing Table

When replacing a bolt, use only a bolt of the same grade or higher.

All U-bolts are grade 5.

Bolts with no markings are grade 2.

Grade 5 bolts furnished with the machine are identified by three radial lines on the head.

Grade 8 bolts furnished with the machine are identified by six radial lines on the head.



GRADE 8



GRADE 5



GRADE 2

TIRE INFLATION

The use of the proper air pressure is the most important factor in satisfactory performance and maintenance of implement tires. Underinflation will damage the cord body of the tire and cause a series of diagonal breaks in the fabric in the sidewall area.

If the tire buckles or wrinkles, the air pressure should be increased to the point where the sidewalls remain smooth while operating.

Check the air pressure every two or three weeks and do not allow the pressure to drop below the recommended pressure.

NOTE: DO NOT OVERINFLATE TIRES.

WHEEL BOLTS

It is recommended that all wheel bolts be checked for tightness before using and again after one day of use. Paint or rust can work out causing the wheel to become loose. Check periodically to be sure the wheel bolts are tight.

BEARING ASSEMBLIES

Bearing assemblies should be checked periodically for looseness. A loose bearing will cause costly damage after a short period of time.

LUBRICATION

Make sure cultivator is properly lubricated (See Maintenance, page 14).

HYDRAULICS

Check lift and wing folding linkages and cylinders for proper alignment and operation. On new machines check that the hydraulic system has been properly charged and purged. (See wing lift circuitry and depth control circuitry.)

TRACTOR PREPARATION

Refer to the operator's manual furnished with your tractor for recommended adjustments and weight distribution.

When using a drawn cultivator, the tractor drawbar should always be pinned in the center to allow for more stability.

Check your tractor's hydraulic fluid level after cycling hydraulics and filling new cylinders and lines. Refill if necessary.



CAUTION

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY AND/OR EQUIPMENT DAMAGE.

- **JUST BEFORE AND DURING OPERATION BE SURE NO ONE IS ON OR AROUND THE IMPLEMENT.**
- **BEFORE ACTIVATING THE HYDRAULIC SYSTEM, CHECK HOSES FOR PROPER CONNECTIONS.**
- **BEFORE LOWERING THE WINGS FOR THE FIRST TIME, MAKE SURE THE ENTIRE SYSTEM HAS BEEN CHARGED WITH OIL.**
- **WITH WINGS DOWN, ALWAYS INSTALL HYDRAULIC CYLINDER CHANNEL LOCK(S) FOR TRANSPORTING.**

HITCHING-DRAWN MODELS

After backing your tractor into position, attach the cultivator hitch to the tractor drawbar, using a hitch pin of adequate strength for the tractor-cultivator combination. Lock the pin in place to prevent loss (particularly when transporting). Always attach the safety chain between the tractor and the implement.

Connect the cultivators hydraulic hoses to the proper couplers on your tractor.

NOTE: AN OPTIONAL POLE JACK MAKES THE HITCHING OPERATION EASIER.

TRANSPORTING

A S.M.V. (Slow Moving Vehicle) emblem should be used at all times while traveling on public roads.

Always place the machine in the transport position, always use the cylinder channel locks (See Figs. 6, 7). Never depend on your tractor's hydraulic system to carry the weight of the implement while transporting.



NOTE: USE EXTREME CAUTION WHEN WORKING AROUND OVERHEAD POWER TRANSMISSION LINES.

Reduce speed when cornering and when traveling over rough and/or uneven ground. Drive at a reasonable speed to maintain complete control of the machine at all times.


Comply with your state and local laws governing highway safety when moving machinery on a highway.

Note: Before and during operation be sure no one is on or around the implement. Serious injury can result from improper use.

Note: Do not fold or unfold the main wings or outer wings while the unit is moving. Stop the unit on a level part of the field when folding and unfolding any wings.

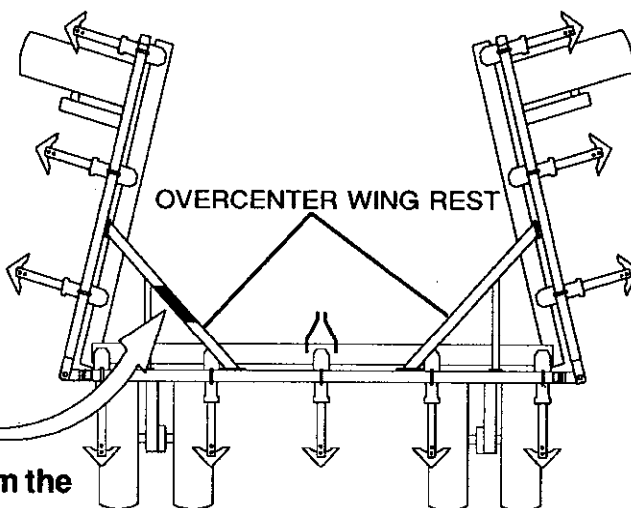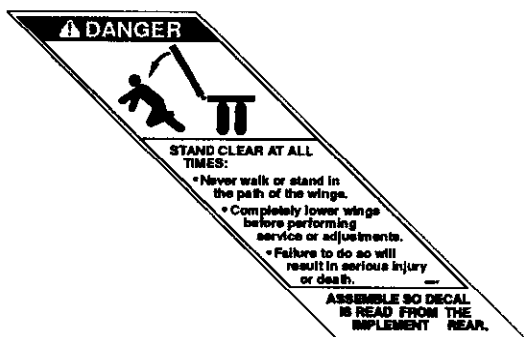

Note: Assemble so decal is read from the implement rear.

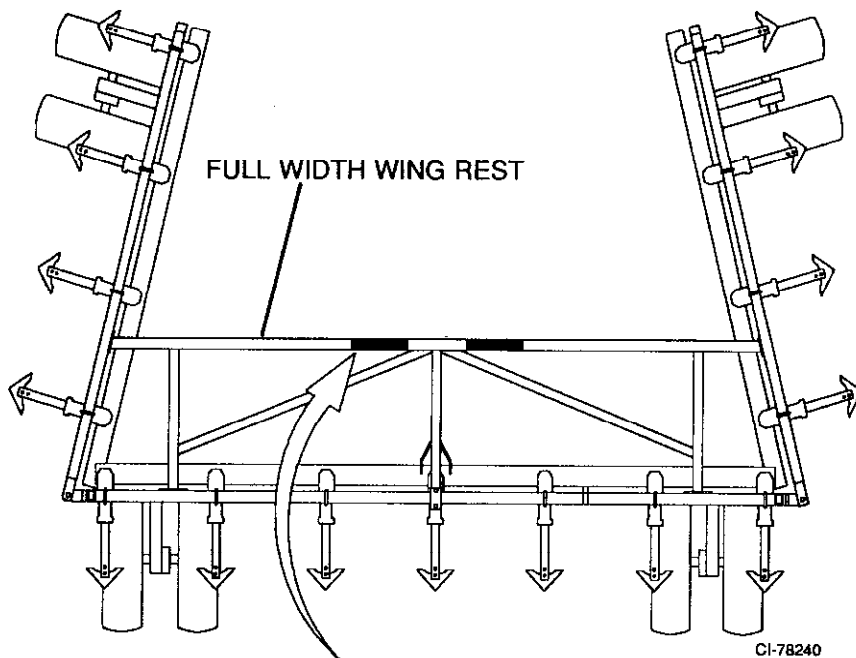

Note: Assemble so decal is read from the implement rear.

CI-78240

	<p>DANGER</p> <p>STAND CLEAR AT ALL TIMES:</p>	<ul style="list-style-type: none"> • Never walk or stand in the path of the wings. • Completely lower the wings before performing service or adjustments. • Failure to do so will result in serious injury or death. 	<p>ASSEMBLE SO DECAL IS READ FROM THE IMPLEMENT REAR.</p>
--	---	---	---

WING LIFT CIRCUITRY

Wil-Rich field cultivators equipped with larger than 2-1/2 ft. wings have hydraulic wing lift cylinders to fold the machine for road transport.

Wing lift cylinders are equipped with an integral restrictor on the rod end cylinder port (See Fig. 3). This allows the wings to lower at a slower rate and prevents the wings from falling too fast should there be some type of hydraulic failure.

Fig. 4 (next page) shows a simple two (2) cylinder circuit used to fold a pair of wings. This system is used on Wil-Rich cultivators with a single pair of folding wings.

Multiple wing cultivators use a sequencing parallel hydraulic system. This system employs a sequencing valve to ensure proper unfolding of the wings. With smaller outer wings the loading of the wing fold cylinders may allow the outer wing to begin to unfold before the main wings are moved. To prevent these smaller wings from catching during wing unfold, the sequence valve forces the main wing cylinders to extend fully before the outer wing cylinders will extend. Once the main wings have been fully lowered the outer wings will begin to unfold.

NOTE: The sequencing valve is adjustable for varying wing sizes and tractor hydraulic pressure. If the outer wing begins to unfold before the main wings, the valve needs to be adjusted. See Fig. 5A. There is an adjustment at the rear of the valve. Loosen the lock nut and with an Allen wrench turn the adjust screw clockwise to restrict the movement of the outer wing. Continue to turn the screw clockwise until the outer wing cylinders only extend after the main wing cylinders are completely extended. Tighten the locking nut securely once the proper setting is achieved.

This type of hydraulic system properly sequences the folding and unfolding of the cultivator wings. Check that your hydraulic system is properly connected before operating.

Lower the wings to the ground and hold the tractor control lever until all cylinders are completely extended. Fully extending the cylinders allows the wings to flex properly in the field.

When raising the wings be sure the wing rest is properly positioned to allow the wings to fold. Fold the main wings until they contact the wing rest.



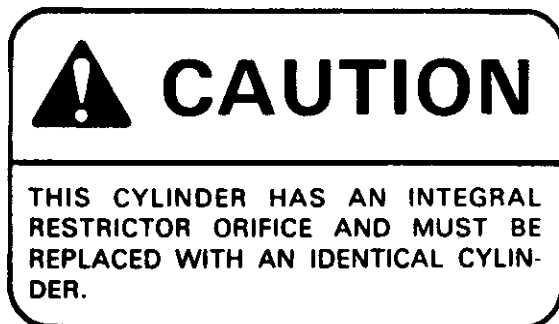



Fig. 3 Wing Lift Cylinder

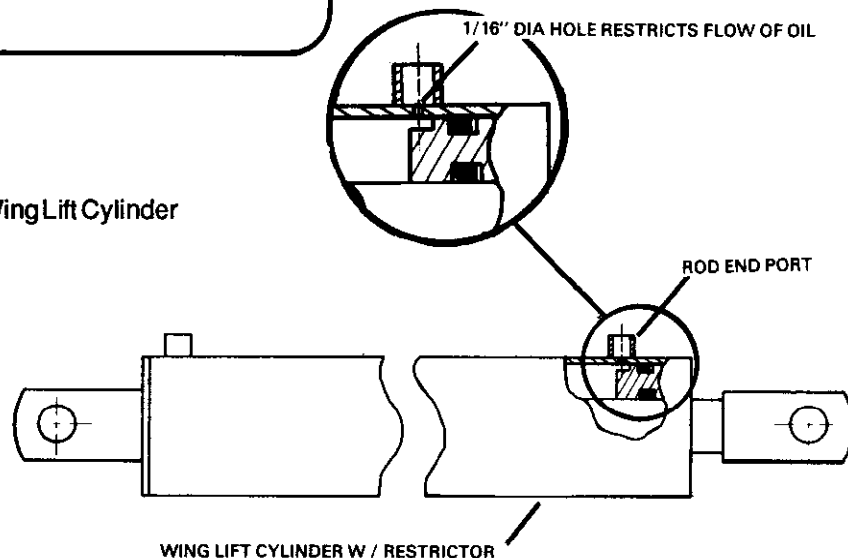

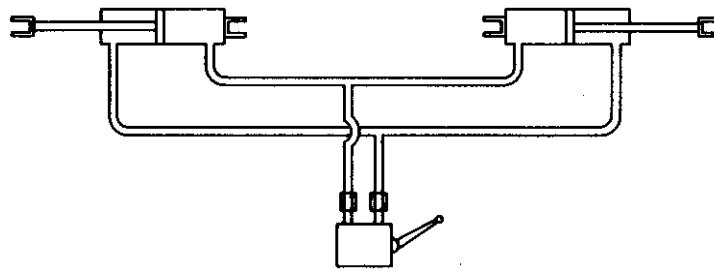


PB-75605

Fig. 4 Two Cylinder Wing Lift Circuit

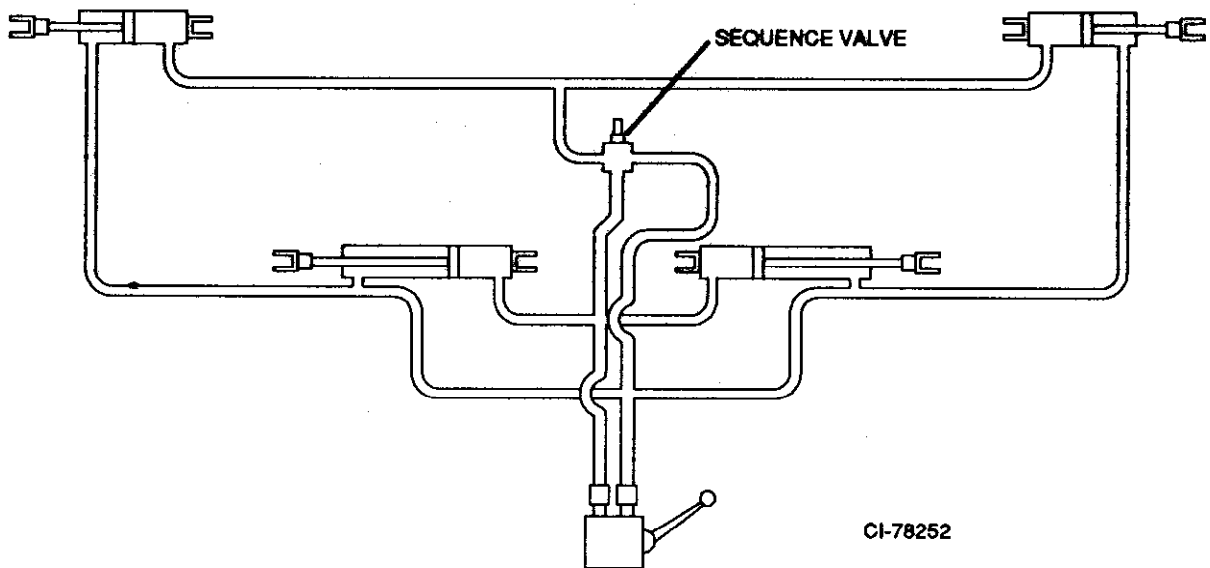

CI-78252

Fig. 5 Four Cylinder Wing Lift Circuit W/Sequencing Valve

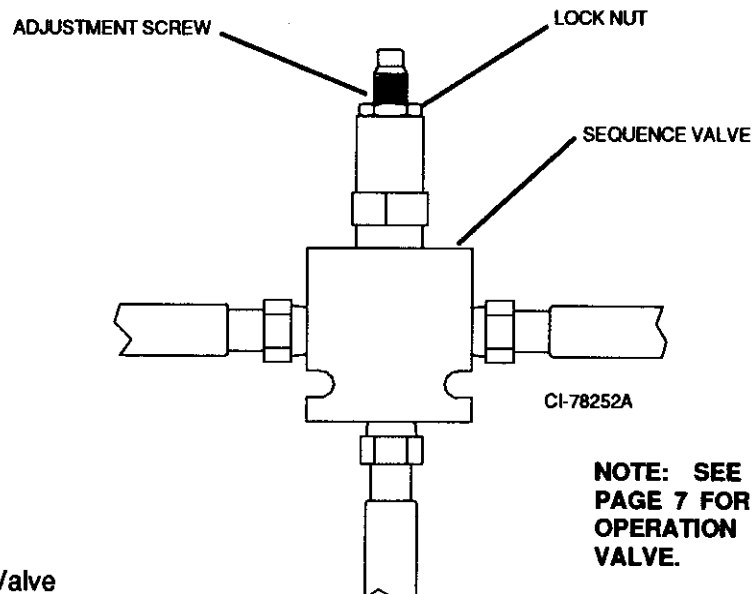


**NOTE: SEE INSTRUCTIONS ON
PAGE 7 FOR ADJUSTMENTS AND
OPERATION OF SEQUENCE
VALVE.**

Fig. 5A Sequence Valve


MAIN FRAME DEPTH ADJUSTMENT

Drawn cultivator main frame depth is regulated by a hydraulic cylinder(s) (See Figs. 6 & 7). The depth is mechanically set by turning the stop collar "down" the cylinder rod for less depth and "up" the rod for more depth. An add-on stop collar is provided if the stop collar doesn't provide a shallow enough setting.

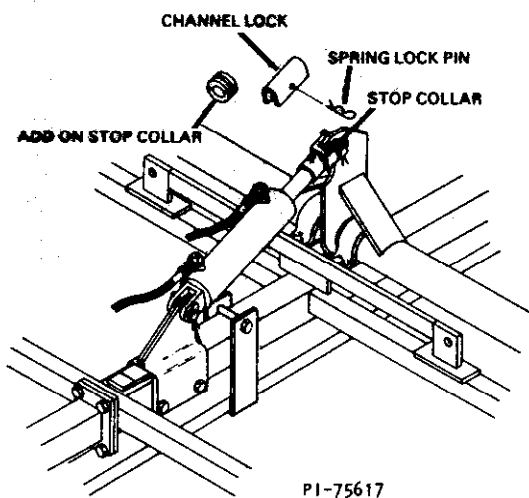

13FT MAIN FRAME (SHOWN)

Fig. 6 Main Lift Cylinder

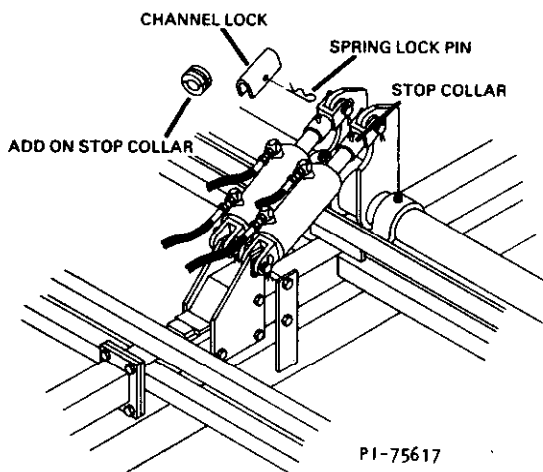

17FT MAIN FRAME (SHOWN)

Fig. 7 Main Lift Cylinders

NOTE: IT IS IMPORTANT TO SET THE CYLINDER STOP COLLARS EQUALLY WHEN THE MAIN FRAME HAS TWO DEPTH CONTROL CYLINDERS.

A channel lock is provided to mechanically lock the cylinders in transport position. On units with two (2) main lift cylinders make certain both cylinders have a channel lock in place before transporting.

WING DEPTH ADJUSTMENT

Wing depth on all Wil-Rich cultivators is held mechanically by independent gaugewheels, or an adjustment linkage.

GAUGEWHEEL WINGS:

To set gaugewheels, it is advisable to have the weight off the tire, loosen the u-bolt which holds the leg in position and turn the crank to raise or lower the tire. Once the depth has been set with the crank, tighten the u-bolt to secure the setting.

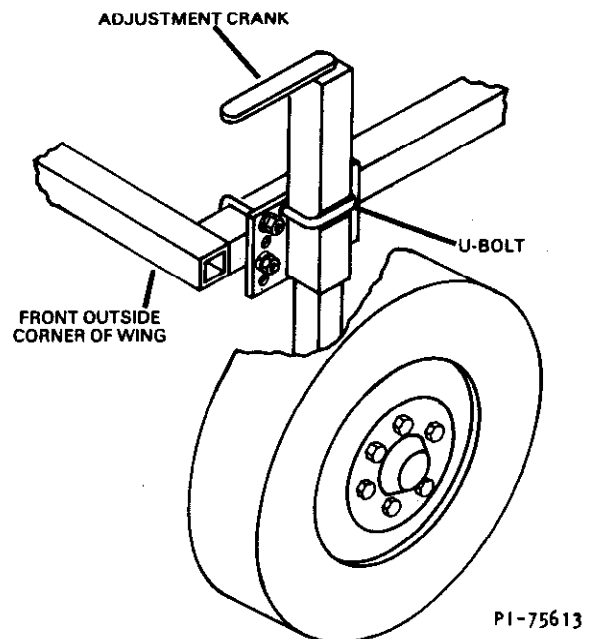


Fig. 8 Gaugewheel

MECHANICALLY LINKED WINGS:

To set the adjustment linkage, lower the cultivator until it is resting on the shanks. This will remove the majority of the weight from the adjustment linkage, allowing it to be turned easily. Shortening the linkage will raise the wing, lengthening the linkage will lower the wing. (See Fig. 9).

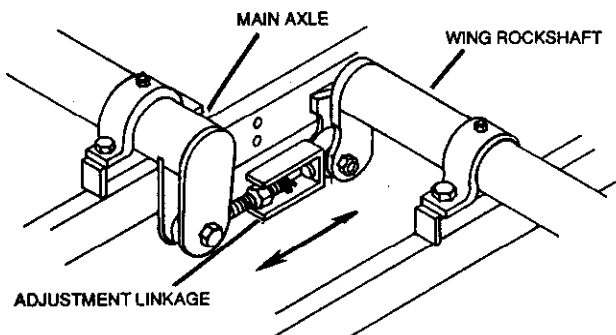



Fig. 9 Adjustment Linkage

PI-75663

CULTIVATOR DEPTH CIRCUITRY

A single main frame depth control cylinder, used on models without wings or with mechanically linked wings. (See Fig. 10)

4 X 8 OR 5 X 8 STANDARD CYLINDER

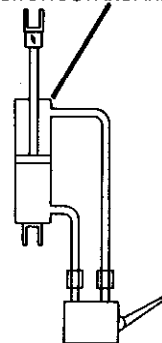


PI-75610

Fig. 10 Depth Control Cylinder

Twin main frame depth control cylinders, used on models with mechanically linked wings. (See Fig. 11).

4 X 8 STANDARD CYLINDERS

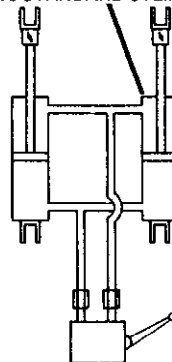

PI-75610

Fig. 11 Depth Control Cylinders

LEVELING CULTIVATOR

Proper field setting will require the use of a tape measure.

Hook the tape measure under the shovel point and measure to the top of the frame tube to get an overall height dimension. Subtract your working depth from the overall height dimension to arrive at a frame height dimension. The frame height dimension is then used as a gauge to level the machine. (See Fig. 12) Although final leveling must be done in the field at working depth, it would be to your advantage to make pre-field adjustments in the yard to speed up the process in the field.

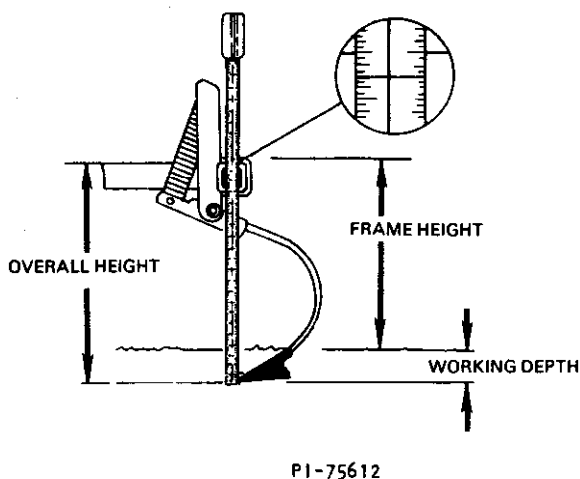


Fig. 12 Frame Height

LEVELING-DRAWN CULTIVATORS

Depth setting should be done in a level area of the field.

LEVELING-MAINFRAMES

Set the hitch so the top of the pole is equal to the frame height dimension. The hitch is adjusted by removing the hitch bolt and moving the hitch to the next hole. (See Fig. 13)

NOTE: ON MACHINES EQUIPPED WITH A DUAL CAST HITCH, FLIPPING THE HITCH OVER WILL PROVIDE A FINER ADJUSTMENT THAN MOVING IT TO THE NEXT SET OF HOLES. (AN ADJUSTMENT OF 1" IS OBTAINED INSTEAD OF 2"). ALSO WHEN MOUNTING THE DUAL CAST HITCH, SEPARATE, WHERE POSSIBLE, THE TWO HITCH BOLTS TO PROVIDE MAXIMUM SUPPORT. (SEE FIG. 13)

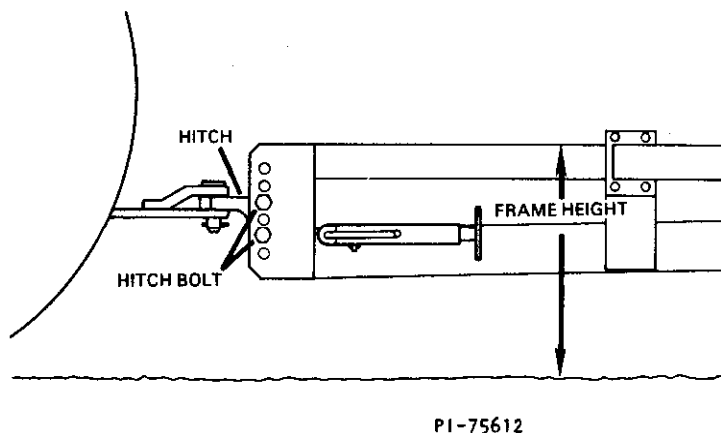


Fig 13 Hitch



FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY AND/OR EQUIPMENT DAMAGE.

- JUST BEFORE AND DURING OPERATION BE SURE NO ONE IS ON OR AROUND THE IMPLEMENT.
- BEFORE LOWERING THE WINGS FOR THE FIRST TIME, MAKE SURE THE ENTIRE SYSTEM HAS BEEN CHARGED WITH OIL.
- BEFORE ACTIVATING THE HYDRAULIC SYSTEM, CHECK HOSES FOR PROPER CONNECTIONS.
- WITH WINGS DOWN ALWAYS INSTALL HYDRAULIC CYLINDER CHANNEL LOCK(S) FOR TRANSPORTING.

Drawn cultivators use one or two main lift cylinders to set the main frame to your frame height dimension. When set at working depth turn the stop collar(s) down against the cylinder body to lock the depth setting. (See Fig's 6 & 7)

It is important to have the hitch and main frame set evenly to assure equal penetration between front and rear shanks.

It may be necessary to shorten the adjustment linkage during the life of the unit to compensate for wear.

NOTE: BE SURE TO CHECK LEVELING OF CULTIVATOR WHENEVER WORKING DEPTH CHANGES, WHEN CHANGING FIELDS, OR WHEN CHANGING TRACTORS.

LEVELING - WINGS

NOTE: THE WINGS ARE LEVELED AFTER THE MAIN FRAME IS LEVELED AT WORKING DEPTH.

NOTE: LARGER CULTIVATORS MAY HAVE MORE THAN ONE SET OF WINGS REQUIRING DEPTH SETTING. ON THESE MODELS THE INNER WINGS SHOULD BE LEVELED FIRST.

The following instructions are given on the leveling of wings. There are no specific instructions for each type or size of cultivator with wings. Determine the type or types of wings your cultivator has and follow the instructions given below. On cultivators with more than one set of wings to level, remember, level the inside wings first.

GAUGEWHEEL WINGS:

The gauge wheels are set by loosening the U-bolt that locks the leg and turning the adjustment crank until the ends of the wings are level with the main frame, at working depth. Retighten U-bolt to secure gauge wheel leg. (See Fig. 8)

MECHANICALLY LINKED WINGS:

Wings with rockshafts are leveled by setting the adjustment linkage (See Fig. 9). To set the adjustment linkage, lower the cultivator until it's weight rests on the shanks. Remove the spring lock pin and turn the clevis to lengthen or shorten the linkage until the ends of the wings are level with the main frame at working depth.

Shortening the linkage will raise the wings. Lengthening the linkage will lower the wings.

Reinstall the spring lock pin to hold the setting.

SHANK & SHOVEL ADJUSTMENT


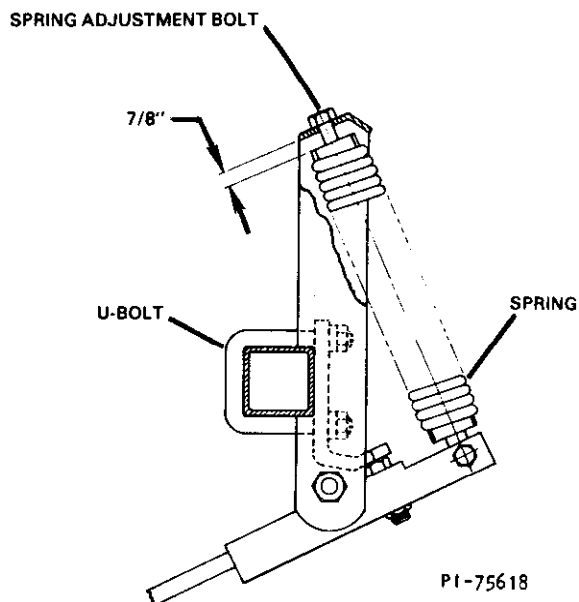


Fig. 14 Shank Assembly


Each shank comes fully assembled from the factory. Install the shanks in their proper location (See assembly manual for shank placements.) and securely tighten U-bolt nuts.

47 degree stem angle shovels are recommended. See your Wil-Rich dealer for a complete shovel shape, size and thickness listing.


It is important how sweeps meet the ground, as it will affect performance.

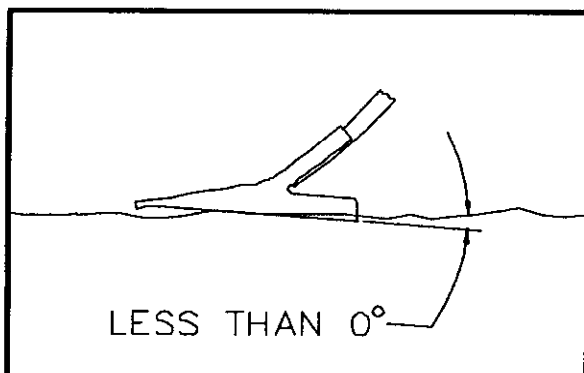

Shovel point up: INCORRECT POSITION - The shovel will have a tendency to ride out of the soil, running over rather than plowing out weeds.

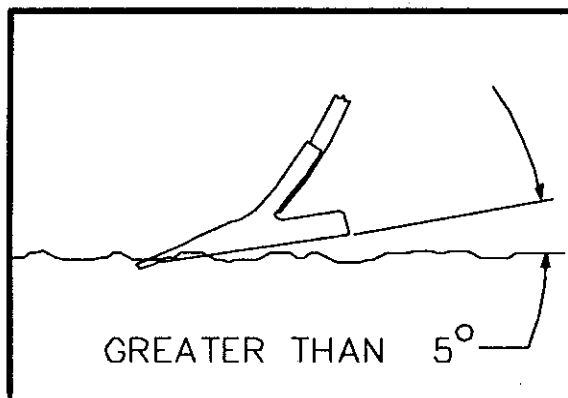

Shovel point down-excessively: INCORRECT POSITION - The shovel will have a tendency to pull the shank deeper, plowing weeds at the point, but cutting weeds above ground with the wings.

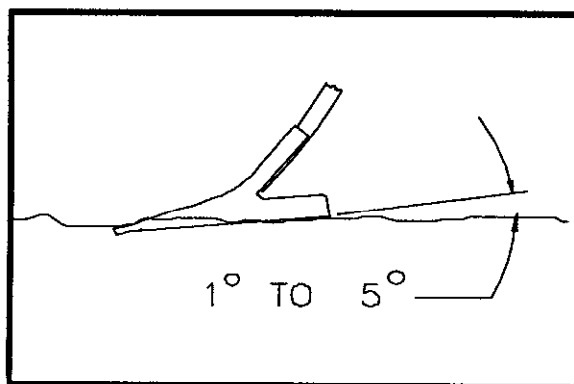

Shovel point down slightly: CORRECT POSITION - The shovel will now work most effectively, cutting weeds from the point thru the wings.

NOTE: PERIODIC CHECKS SHOULD BE MADE TO ASSURE THAT ALL NUTS AND BOLTS REMAIN SECURELY TIGHTENED.

NOTE: BE SURE TO MAINTAIN ADEQUATE TIRE/SHOVEL CLEARANCE ON SHANKS LOCATED IN AND AROUND THE WHEEL WELL WHEN MACHINE IS FULLY RAISED OR LOWERED.

MAINTENANCE



CAUTION

DO NOT ATTEMPT TO CLEAN, ADJUST, OR LUBRICATE CULTIVATOR WHILE IT IS IN MOTION.

It is important that the cultivator be regularly lubricated as recommended to obtain the most efficient operation. Proper lubrication helps prevent down-time due to excessive wear and increase the machine's life.

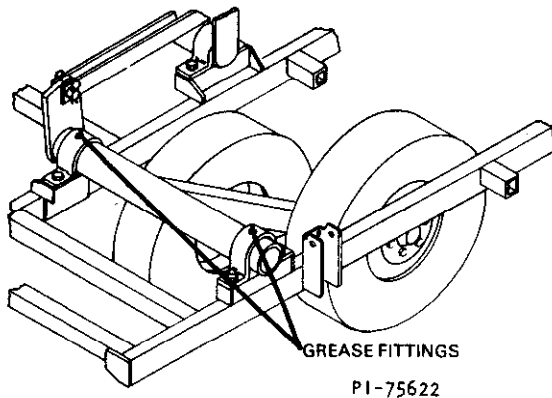


Fig. 15 Axle Caps

AXLE CAPS

All axle caps should be greased once a day with a good quality grease. Lower machine onto the shovel points to relieve pressure on the caps which will make greasing easier. (See Fig. 15)

WALKING TANDEM ASSEMBLIES

Periodically check each walking tandem assembly for looseness and tighten spindle nut if the bearings show any evidence of side play.

Clean and re-pack walking tandem assemblies once each season.

The spindle nut should be tightened to allow a heavy drag when assembly is rotated by hand. (See Fig. 16).

HUB AND SPINDLE ASSEMBLIES

Clean and re-pack hub and spindle bearings once each season.

Tighten spindle nut so that there is a slight drag on the wheel when turned by hand. (See Fig. 16)

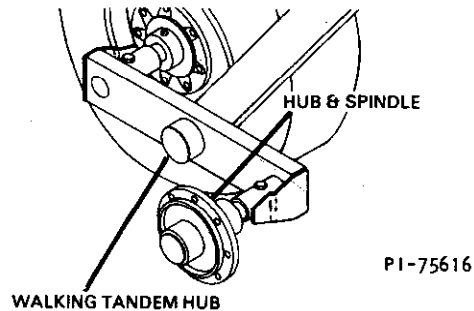


Fig. 16 Walking Tandem

CYLINDER SHAFTS

If cylinder shafts are left exposed for any extended period of time, they should be coated with grease to protect them from rust and corrosion.

STORAGE

NOTE: IF POSSIBLE STORE YOUR CULTIVATOR INSIDE.

At the end of a season; clean trash, soil, and dirty grease from the machine and re-lubricate.

On small cultivators, fold the wings onto the wing rest, retracting the cylinder rods to prevent them from rusting.

It is advisable, if possible, to store the larger cultivators with the wings down. With the wings completely lowered, the rod end cylinder bolt of the wing lift cylinders should be removed and the cylinders carefully retracted.

Avoid possible damage to the hydraulic system by lowering the machine onto the shank and relieve the pressure on the system. Doing this will also prevent damage to the tires by removing the cultivator's weight.


Coat the shovels with grease and place boards under the points to prevent the cultivator from settling into the ground.

OPTIONAL EQUIPMENT

SHOVELS AND SPIKES

Spikes are recommended for deep penetration, hard soil conditions, killing of quack grass and other grassy weeds, and also for general tillage. These spikes are reversible for longer wear.

- 2" Reversible Spike
- 2" Hard Surface Spike
- 2" Dura-Face Spike

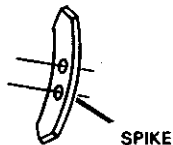


Shovels should be used for general tillage, seedbed preparation and weed eradication.

- 9" Dura-Face Sweep
- 4" Shovel (924)
- 7" Low Crown Shovel (724)
- 9" Low Crown Shovel (724)
- 7" Low Crown Shovel (924)
- 9" Low Crown Shovel (924)
- 10" Low Crown Shovel (924)
- 12" Low Crown Shovel (924)
- 7" High Crown Shovel
- 9" High Crown Shovel
- 10" High Crown FC Shovel
- 12" High Crown FC Shovel


SHOVEL EXTENSION

A shovel extension kit is available to increase shovel penetration behind wheel tracks.

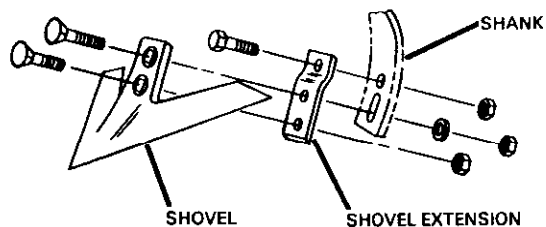


PI-75611

HITCHES

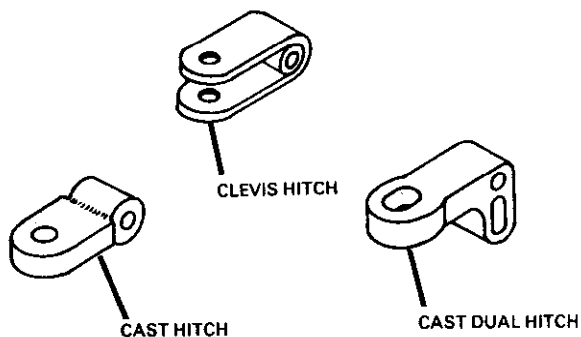


HARROWS

Wil-Rich harrows are available in 3-bar and 4-bar models to fit any size field cultivator.

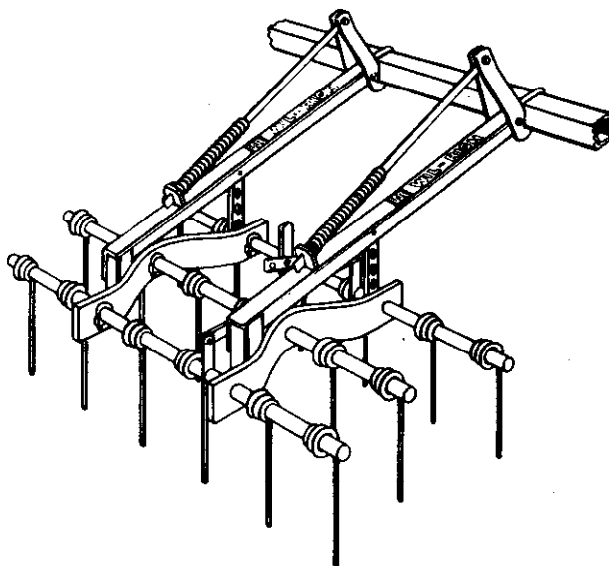


AUXILIARY HITCH

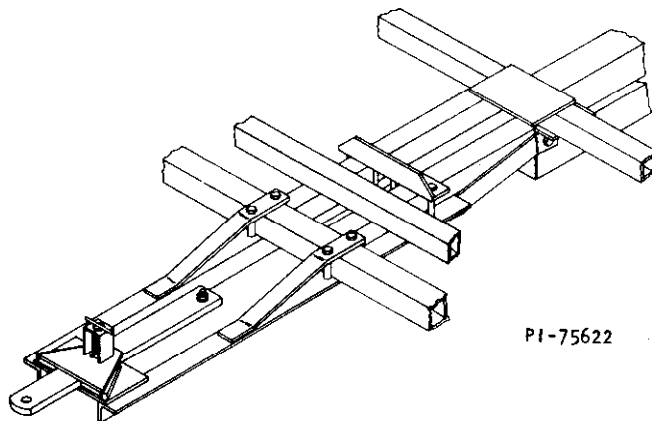


PI-75622

POLE JACK

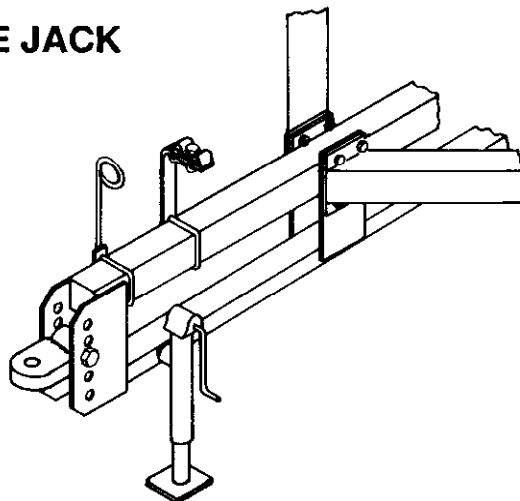


REAR JACK STAND


The rear jack stand kit can be attached to the rear bar of the cultivator to prevent it from tipping backwards. Locate as close to center of main frame as possible.

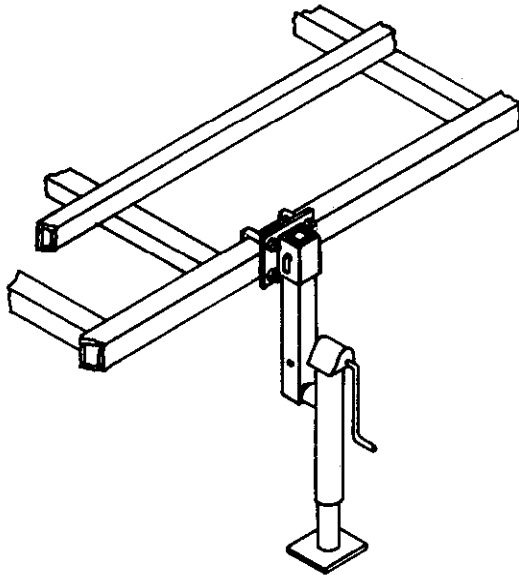

STABILIZER GAUGEWHEEL

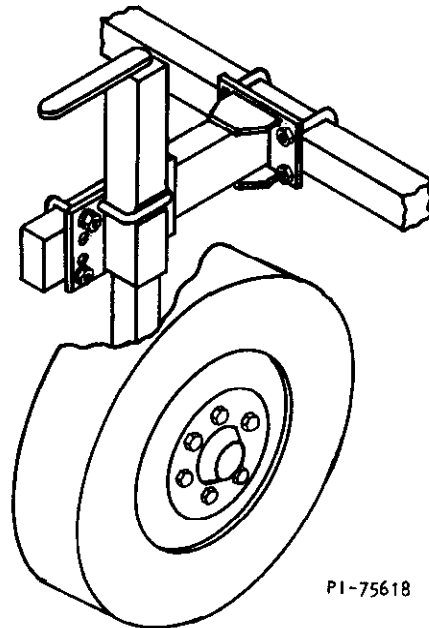

GAUGEWHEEL

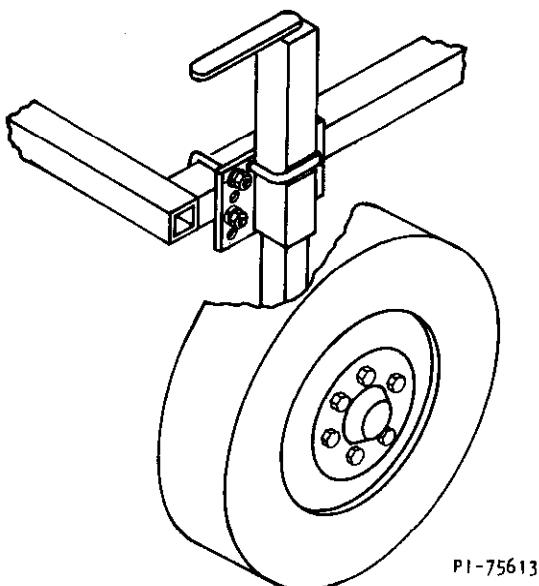

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Poor or uneven penetration	Incorrect adjustments on main frame or wings.	See leveling, page 11.
		Make sure wing cylinders are fully extended.
	Hitch not adjusted properly	Install clevis hitch or cast hitch in proper hole to keep machine level.
	Hydraulic malfunction - air in lines, cylinders or hoses leaking or not installed properly.	Check for oil leakage in cylinders, hoses and fittings. Make sure all hydraulic cylinders and hoses are properly connected.
	Worn shovel points.	Adjust stop collar of main lift cylinder(s) to compensate for wear. Replace shovels if wear is severe.
Settling of entire implement from raised position.	Leaking cylinder	Replace cylinder seals
	Leaking tractor hydraulic control valve.	See tractor manual
Wings lowering too rapidly.	Incorrect cylinder installed, should have 1/16" dia. integral restrictor cylinder.	See wing lift circuitry page 7 and install correct cylinder.
Machine will not pull straight (skewing)	Cultivator not level	See leveling, page 11.
	Incorrect shank placement	Check shanks for proper location
	Tires not equally inflated	Inflate all tires to recommended pressure.